Roland

Copyright © 2010 ROLAND CORPORATION
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.
Roland is a registered trademark of Roland Corporation in the United States and/or other countries.

* 5 1 0 0 0 1 5 4 7 0 - 0 2 *

Shortcuts

By using these shortcuts you can directly access a desired screen without going through a menu screen.

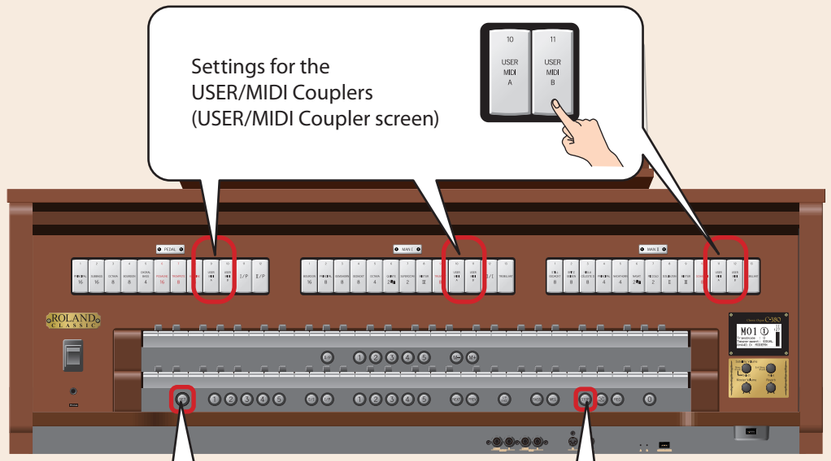

[SET] piston

While holding and following operation

Setting the playing or recording
(Song Recorder screen)

Press

Listening to the demo songs
(Demo screen)
[PLAY/PAUSE] piston

Press

Adjusting the external devices sound
(Audio screen)
[Master Volume] knob

Turn

Setting the reverb
(Room Modeling screen)
[Reverb] knob

Turn

Setting the melody coupler
(Console screen)
[MEL] piston

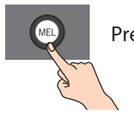

Press

Setting the bass coupler
(Console screen)
[BASS] piston

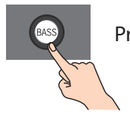

Press

Changing the tuning or pitch
(Pitch/Tuning screen)

Press

Setting the expression pedal
(Exp. Pedal screen)

Operate

Setting the tremulant
(Tremulant screen)
[TREMULANT] tablet

Press

Storing your settings
(Custmize)
[0] piston

Press

Classic Organ C-380 C-330

Quick Manual

This manual explains the most important operations. Refer to the owner's manual for details on these and other operations.

Playing the Organ

Let's start by performing with a organ sound.

1. Turn on the power.

When the power is turned on, the main screen will appear in the display.

NOTE
Immediately after the power is turned on, no stops are selected, meaning that the keyboard will not produce sound.

2. Select a stop (sound).

Press the upper part of the tablet to turn off the stop.

Press the lower part of the tablet to select the stop.

3. Adjust the sound.

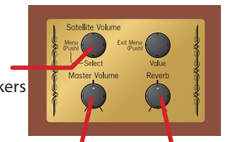

Volume of the Satellite Speakers

Master Volume

Reverberation

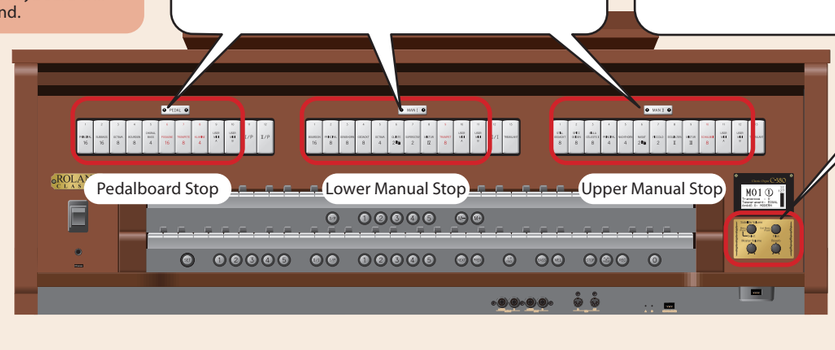

Selecting a Sound Variation (Voice Palette)

By pressing a tablet, you can choose between variations of the sound for the selected stop.

1. Press a tablet.

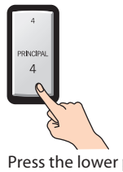

Press the lower part

2. The voice palette screen will appear.

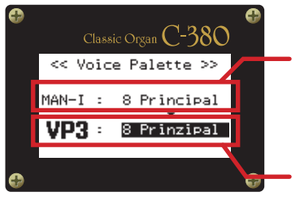

Selected stop name

Currently selected variation

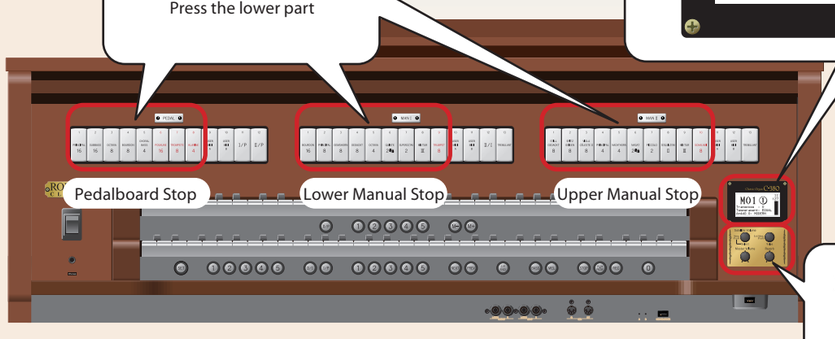

3. Select a variation.

Choose from four variations, VP0 through VP3.

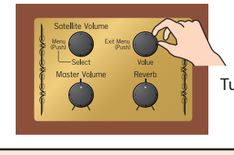

Turn

MEMO
If the Voice Palette screen does not appear, press the [Value/Exit Menu] knob several times to access the main screen (which shows the memory bank), and then proceed as above.

Main Screen

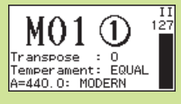

Storing Your Favorite Settings

All settings for the upper manual, lower manual, and pedalboard can be stored together in one of the general pistons (1) — (5).

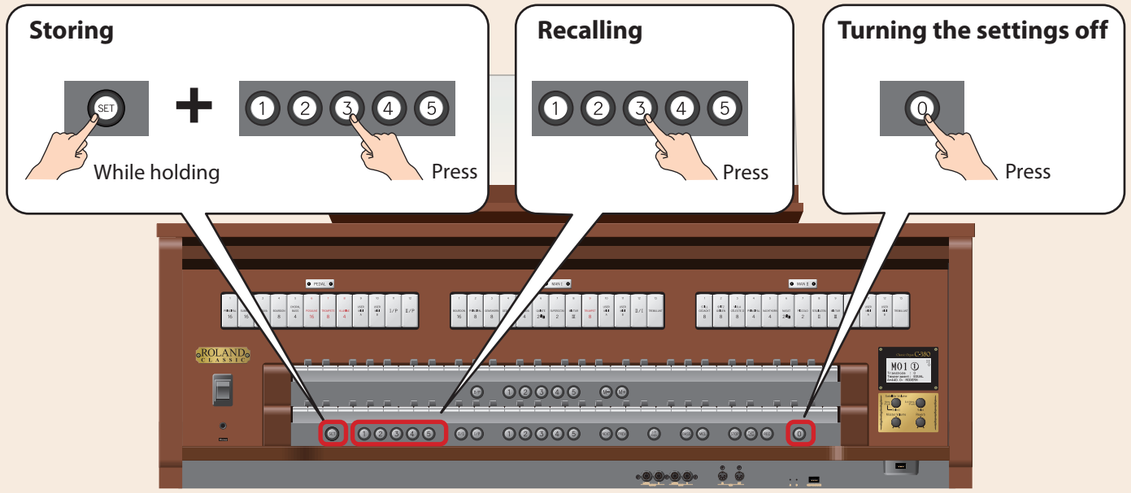

MEMO

The state of the general memory [1]–[5] pistons can be stored as a "memory bank."

MEMO

The (0) piston sets the organ to the condition in which all tablets and couplers are cancelled so that no sounds are selected. This piston is also called the "cancel piston."

MEMO

On the C-380, you can store only the each manual settings to a "division memory piston."

Making Settings in the Menus

Heres how to make settings using the menus.

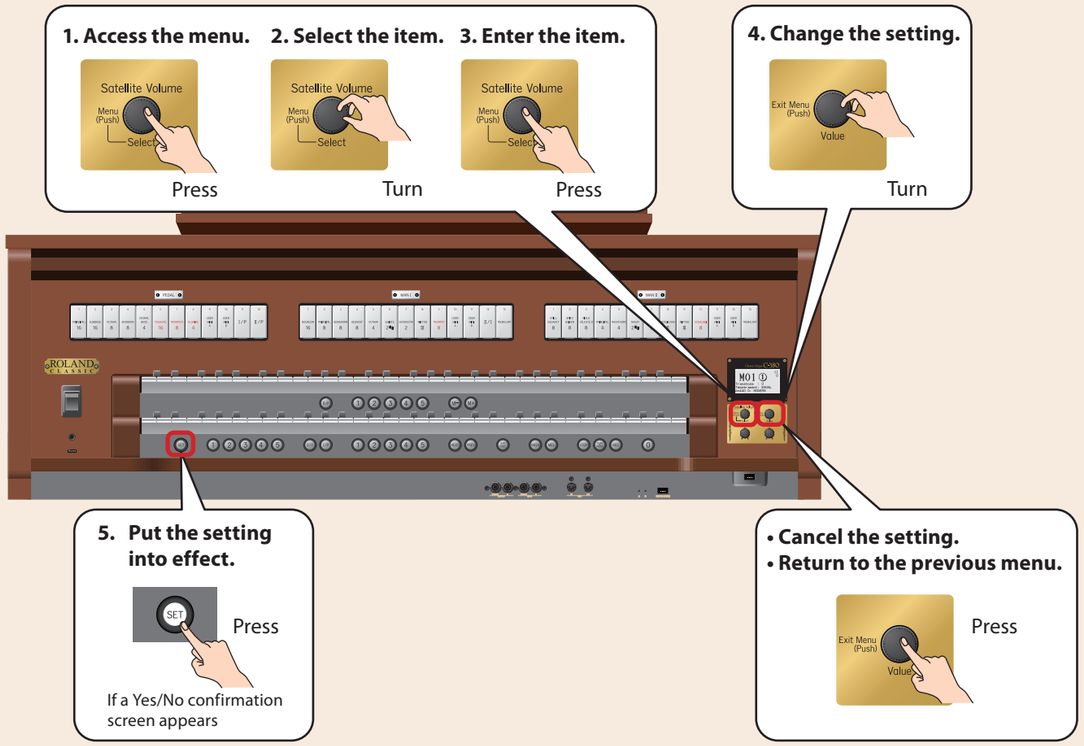

Menu List

* For details, refer to the Owner's Manual.

Setting category	Contents of the category	Detailed items
1 Demo	• Listen to demo songs	Group Song Tempo Satellite VR
2 Pitch/Tuning	• Settings for pitch and Temperament	Pitch Temperament Tuning Transpose
3 Song Recorder	• Recording settings • Play back settings • Saving, deleting, and copying song data	Song Tempo Measure Play Mode Devision Mute Metronome Volume Beat Save Song Delete Song Copy Song
4 Room Modeling	• Reverb settings	Room Type Wall Type
5 USER/MIDI Coupler	• USER coupler settings • MIDI coupler settings	* Details of the available items will depend on the Source/MIDI CH setting. For details, refer to the Owner's Manual.
6 Console	• Display contrast • V-LINK setting • MEL and BASS coupler settings	Display Contrast V-LINK Bass Split Mel Split
7 Tremulant	• Tremulant settings	Depth Rate
8 Exp. Pedal	• Expression pedal settings	MAN-I/Pedal MAN-II Shutter Kick SW R Kick SW L Exp.Mode
9 Audio	• External device settings	Aux In Volume Aux In Reverb Line Out Gain
10 MIDI	• MIDI settings	Local Tone Name Tx Piston
11 Save/Load (USB)	• Save/load the contents • Format the USB Memory • Factory Reset	Save Memory Bank Load Memory Bank Copy Memory Bank Delete Memory Bank Save Voice Setup Load Voice Setup Delete Voice Setup Format USB Memory Factory Reset